

SAFE OPERATING PROCEDURE

Walk Behind & CC10 Style Road Roller

PPE REQUIRED



GENERAL SAFETY INSTRUCTIONS

- » Complete pre-start checklist
- » Read Manufacturers Operation Manual
- » Report any faults or damage to Northire 07 40 923 400
- » Do not wear loose clothing or jewellery
- » Do not operate equipment near pedestrians or people
- » Do not operate without the appropriate PPE as detailed
- » Do not operate equipment under the influence of drugs or alcohol

GENERAL ENGINE SAFETY

- » Refuelling- Do not smoke, or introduce ignition source, always turn engine off and allow engine to cool first, relieve fuel pressure by loosening cap slowly, wipe clean any fuel spills prior to re-start, If fuel spilled on clothes change clothes, ensure cap is replaced & store fuel vessel away from work area
- » Do not breathe the fuel vapour & replace cap securely after fuelling
- » Do not operate engine without adequate ventilation
- » Beware of hot surfaces on engine & other parts

RISK ASSESSMENT

- » Assess the immediate work area for any hazards
- » Control or eliminate all the risks associated with the hazards
- » Hazards to check for that may require risk control-
 - Overhead power lines
 - Stored energy- air, hydraulic, electricity, pressure
 - Digging
 - High Voltage
 - Confined space
 - Any stored energy
 - Traffic & moving machinery
 - Falling objects
 - Working at height

OPERATING SAFETY INSTRUCTIONS

Ensure you are familiar with the emergency stop, engine shut down procedure and braking systems. Ensure Emergency stop and battery isolator is set to operate prior to entering cab.	Do not operate near a trench, gully, valley or drop off in the ground & Avoid driving across a slope and never drive on a slope greater than 20 degrees or 36%. Use lowest gear on a slope.
Ensure you always maintain 3 points of contact climbing in and out of roller, beware of door pinch points & test it opens from inside. Never mount roller whilst it is moving.	Ensure segregation from general traffic flow and pedestrians. It is recommended to maintain a 7m exclusion zone
Ensure articulation lock is removed prior to normal operation	If lifting roller, ensure articulation lock is engaged prior to lift
Always wear seat belt and be seated during operation	Beware of soft, damp and wet soils that may give way
Do not operate loader if you have do not have vision as required by your standard Drivers Licence. Do not operate roller with any passengers	Do not operate near a trench, gully, valley or drop off in the ground Er Avoid driving across a slope, exercise care and never drive on a slope greater than 20 degrees or 36%
Do not operate roller unless you are competent to operate	Do not adjust amplitude during operation - stop first
If Applicable ensure Vibration/ amplitude switch is set to "OFF" prior to starting and especially during loading or unloading	When driving close to unsafe edges or holes, ensure at least 2/3 of the drum width is on firm ground
Plan work area & set mirrors prior to operation	Ensure parking brake is engaged prior to leaving roller
Do not operate plant in confined spaces	Do not park roller on uneven ground
Never use petrol as a cleaning agent on roller	Read Operation Manual prior to servicing or towing
ROPS (Roll over protection structure) is always recommended on slopes and if damaged cease work immediately and contact Northire	Only approved service personnel to work on air conditioning as it contains harmful gases and high pressure
Do not operate roller until hydraulic fluids have reached operating temperature as breaking distance impacted	All hydraulic lines and fluid cooling systems are pressurised so never open, cut or damage lines
Battery isolator located in engine compartment. Engine hood must be unlocked during operation so the isolator can be quickly accessed.	Prior to Service or working on Roller lock out articulation, tag out roller, remove keys, chock wheels and drums
Never climb on roller	Avoid sharp turns
Test the parking brake prior to operation -while rolling slowly in the forward direction engage brake -roller must stop - if failure tag out machine immediately	For transporting, ensure the roller is secured to the truck in line with the Australian Load Restraint Guide 2004
If fitted with a strike off blade -only use in the forward direction and when not using always operate with the blade in the upper most Position	Secure seat prior to operation and always close door on cab prior to operation
If the machine tips -do not jump, brace yourself, stay in cab, keep seatbelt fastened, hold on and lean away from point of contact	Never operate or start the machine from outside the cab or seat as you could move the controls the wrong way and cause serious injury.
Never open the radiator cap when the engine is running or hot	Maintain proper tyre pressure -refer manufacturer specifications